


NEWPORT 24 HEAD OPERATION

USE THE HEAD = USE THE PUMPING STATION (REVERSE SIDE)



- Open Seawater Valve
 - Located under bench cover/cushion behind head
 - Blue handle
 - Vertical=Open

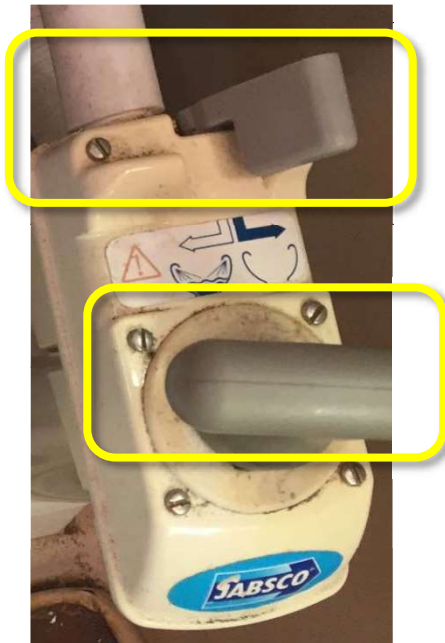

- Pump Seawater In
 - Move switch to left
 - Use pump handle
- Do Your Business
 - Not pictured
- Pump Additional Seawater In
 - As needed to clean bowl
- Pump Out
 - Move switch to right
 - Use pump handle



- Close Seawater Valve
 - Horizontal=Closed
- Replace Bench Cover/Cushion

PUMPING STATION | NEWPORT 24




The pumping station is to port as you leave the Shelter Island Yacht Basin (or to starboard as you enter).

This is also a U.S. Customs station, boats coming from Mexico may be docked here for inspection.






Newport 24 Pumping Station Prep

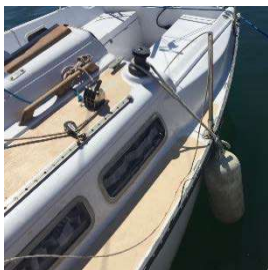

- Waste port is on port side
- Ensure fender is on port side
- Tie up to dock on port side
- Locate key to unscrew waste cap in sink basin
- Feed key/line through hatch onto deck and unscrew waste cap

Key is on a line but cap is not, keep cap secured when removed!

Pumping Station Operation

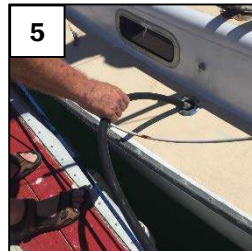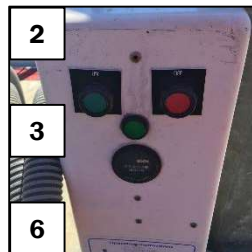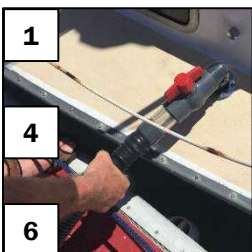


1. Fit vacuum hose into waste port, turn red flow control to "open" (parallel to hose)
2. Press green "On" button on pump
3. When all waste/water has been vacuumed, press red "off" button on pump
4. Turn red flow control to "closed" (perpendicular to hose)
5. Locate water hose, feed into waste port and run water until full
6. Repeat steps 1-4

Please coil water and vacuum hoses neatly back on dock when done

Use key to screw waste cap back in place, return key to sink basin

OPEN (VERTICAL)

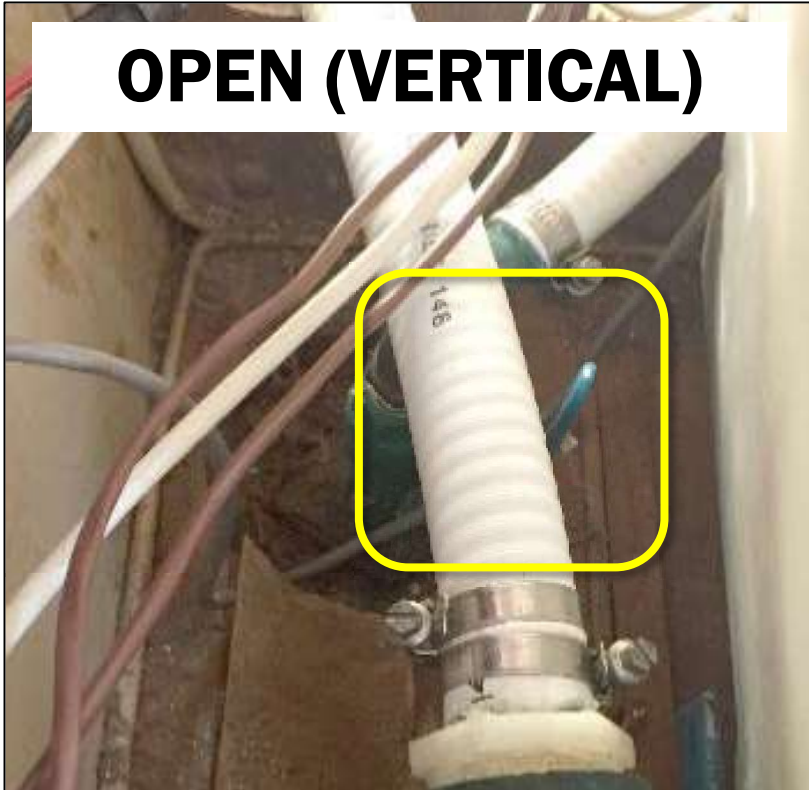

CLOSED (HORIZONTAL)

